

# bemodern

FIREPLACES & STOVES | BATHROOM FURNITURE  
Installation & User Instructions



## Electric Stove Model: 2602

This product is only suitable for well insulated spaces or occasional use.

THESE INSTRUCTIONS SHOULD BE READ CAREFULLY AND RETAINED  
FOR FUTURE REFERENCE.



# bemodern

FIREPLACES & STOVES | BATHROOM FURNITURE

## **Important Safety Instructions**

When using this appliance, basic precautions should be followed to reduce the risk of fire, electric shock, and injury to person, including the following:

- This heater must be used on an AC supply only and the voltage marked on the heater must correspond to the supply voltage.
- Do not switch the appliance on until it properly installed as described in this manual.
- The heater must not be located immediately below a socket outlet.
- Do not leave the appliance switched on when leaving your home or going to sleep.
- Do not leave unattended when plug in to the mains supply.
- This heater is not intended for use by children. Never leave unsupervised children where the heater is left switched ON (I) or unguarded.
- Only use the appliance for domestic purposes and in the way indicated in these instructions.
- From time to time check the cord for damages. Never use the appliance if the cord or any part of the appliance shows any signs of damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



 
- **WARNING:** In order to avoid overheating, do not cover or obstruct the heater in any way.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- Make sure the connection cord does not touch any hot surfaces.
- Keep the appliance at least 100cm (1.0m) from walls and any other combustible materials.
- Do not use the appliance outdoors
- Do not use if you have wet hands.
- Never move the appliance by pulling the cord.
- Before cleaning the appliance, make sure it is unplugged from the mains power and that it is completely cool
- Do not clean the appliance with abrasive or chemicals.
- Never use accessories that are not recommended or supplied by the manufacturer.
- Never route the mains cable beneath carpet.
- Never use aerosols or similar close to the heater.
- Never use the heater to dry clothes or any other similar items.
- In order to avoid a hazard due to inadvertent resetting of the thermal cut cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by utility.
- This heater must not be used with an extension lead.
- Do not use this heater with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

# bemodern

## FIREPLACES & STOVES | BATHROOM FURNITURE

- Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on / off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- **WARNING:** This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- **CAUTION-** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

### Feet Assembly Instructions

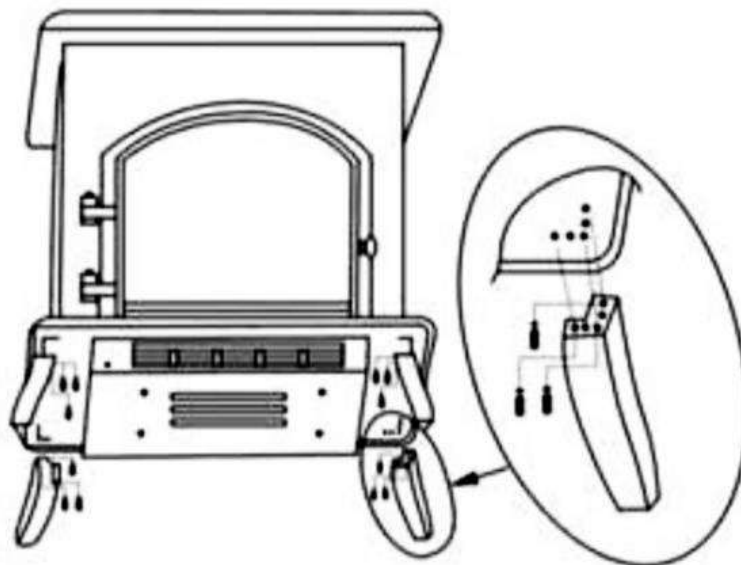


1. Ensure that the heater is not plugged in and is completely cool before attaching the feet.
2. Carefully turn the heater over so that the underside is facing upwards. Place it on a soft surface so as to not scratch the top.
3. Place one of the heater feet against a corner of the underside of the heater, ensuring that the screw holes are aligned with the thread in the heater.
4. Secure the foot to the heater using three screws. Tighten them evenly to avoid the foot becoming skewed.
5. Repeat steps 3-4 for each of the three remaining feet, until all four are securely attached.
6. Carefully turn the heater upright and check the stability of the feet. If there is no excessive wobble once turned upright then the heater can be placed in the desired position and used normally. If there is wobble then ensure that the screws are evenly tightened.

# bemodern

 FIREPLACES & STOVES | BATHROOM FURNITURE


## Placement

- **This heater is designed to be placed on a hard, level surface. When positioning, please keep the following points in mind:**
- If you are placing the heater in an alcove, make sure that there is at least 150mm of space on all sides to ensure good air circulation
- The heater must not be located over a fixed electrical socket. The socket must always be accessible in order to disconnect the heater from the electrical supply for maintenance.
- Keep hearth rugs and other soft furnishings away from the front of the heater. They could obstruct the free flow of hot air from the fan and damage both soft furnishings and heater.

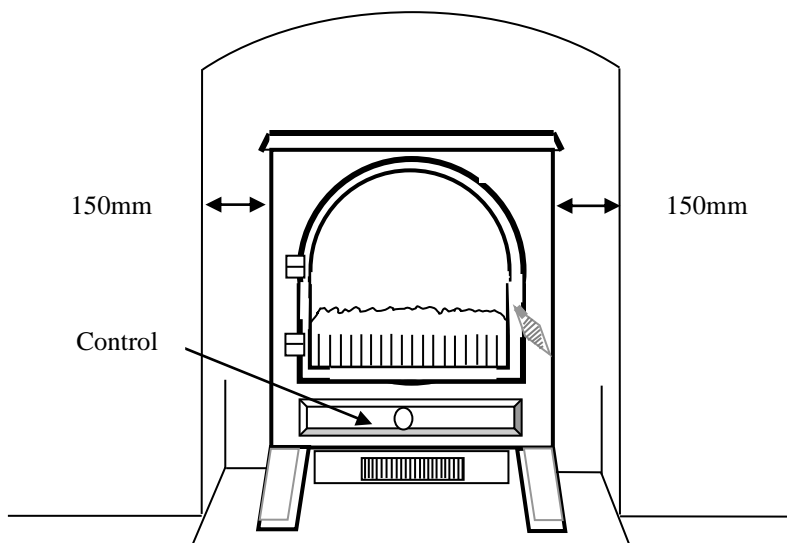

## Location of Controls

 - **The following switches are located under the front door of heater.**

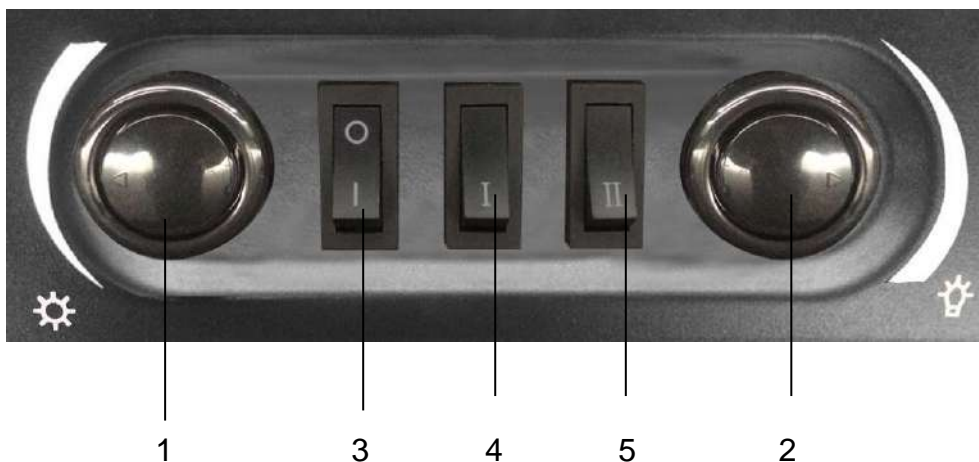

- |                      |   |
|----------------------|---|
| 1. Thermostat knob   | - Adjust to maintain room temperature                           |
| 2. Flame dimmer knob | - Adjust to set flame intensity                                 |
| 3. Flame switch      | - Turn on/off electricity supply to the heater and flame effect |
| 4. Heater switch     | - Turn on/off for one of 900W heat setting                      |
| 5. Heater switch     | - Turn on/off for one of 900W heat setting                      |

# bemodern

FIREPLACES & STOVES | BATHROOM FURNITURE

## Operation Instructions

- Insert plug into mains socket.
- Open the front door of heater
- Select the desired functions:
  - Flame / fuel effect on / off (3)
  - Low heat setting 900W (3 + 4)
  - High heat setting 1800W (3 + 4+ 5)
- It is necessary to switch on (3) to activate heating function.
- Increase or decrease flame intensity by turning clockwise or anti-clockwise the flame dimmer knob (2).
- Rotate thermostat knob (1) clockwise or anti-clockwise to increase or decrease desired room temperature setting.
- **Notice: The heater will only work if flame switch is on and thermostat is set above current room temperature.**

## Safety Cut-out

- This appliance is fitted with a safety cut-off which will operate if the heater overheats (e.g. Due to blocked air vents). For safety reasons, the heater will NOT automatically reset.
- To reset the appliance, disconnect the appliance from the mains supply for at least 15 minutes. Reconnect the supply to the mains and switch on the appliance.

## Bulb Replacement

- **The bulbs inside the heater is LEDs and not replaceable.**

## Cleaning and Care

- Before cleaning, always remove the plug from the electrical socket. Ensure that the unit is cool enough to work on.
- Do not use harsh chemicals or solvents to clean this product and avoid using abrasive cleaning agents.
- The heater and glass parts need only to be wiped clean with a dry, soft cloth; do not use polishes or abrasive materials.
- Do not immerse in water or any liquid when you clean it. Use a slightly damp, lint-free cloth to clean this appliance.

## Trouble Shooting

- **No heat or light:** Check the wall socket by plugging in a working appliance. If the socket is functional, and the cord or plug of the heater is suspected to be faulty, have it checked by an electrician.
- **Light but no heat:** Check that the thermostat on the heater is set above the current room temperature. Alternatively, the thermal cut-out may have engaged - see thermal cut-off section.

## Specifications

- **Voltage: 220-240V~ 50Hz**
- **Power Consumption: 1800W**
- **Bulb: LED's**

# bemodern

FIREPLACES & STOVES | BATHROOM FURNITURE

## General Information

<b>Model</b>	<b>2602</b>					
Item	Symbol	Value	Unit		Item	Unit
<b>Heat output</b>					<b>Type of heat input, for electric storage local space heaters only (select one)</b>	
Nominal heat output	$P_{nom}$	1.8	KW		manual heat charge control, with integrated thermostat	Not applicable
Minimum heat output (indicative)	$P_{min}$	0.9	KW		manual heat charge control with room and/or outdoor temperature feedback	Not applicable
Maximum continuous heat output	$P_{max,c}$	1.8	KW		electronic heat charge control with room and/or outdoor temperature feedback	Not applicable
<b>Auxiliary electricity consumption</b>					fan assisted heat output	Not applicable
At nominal heat output	$e_{l_{max}}$	0.0	KW		<b>Type of heat output/room temperature control (select one)</b>	
At minimum heat output	$e_{l_{min}}$	0.0	KW		single stage heat output and no room temperature control	[no]
In standby mode	$e_{l_{SB}}$	0.0	KW		Two or more manual stages, no room temperature control	[no]
					with mechanic thermostat room temperature control	[yes]
					with electronic room temperature control	[no]
					electronic room temperature control plus day timer	[no]
					electronic room temperature control plus week timer	[no]
					<b>Other control options (multiple selections possible)</b>	
					room temperature control, with presence detection	[no]
					room temperature control, with open window detection	[no]
					with distance control option	[no]
					with adaptive start control	[no]
					with working time limitation	[no]
					with black bulb sensor	[no]
Contact details	<b>BE MODERN LIMITED; 19/34 BEDESWAY, BEDE INDUSTRIAL EST, JARROW, TYNE AND WEAR NE32 3BE</b>					

# bemodern

FIREPLACES & STOVES | BATHROOM FURNITURE

## Electrical Connections - UK Plug Wiring Instruction

 
- If the plug has to be changed because it is not suitable for your socket, or due to damage, please follow the wiring instructions shown below.

- **The wires in the mains lead are coloured in accordance with the following code:**

<b>BROWN</b>	:	<b>LIVE (L)</b>
<b>BLUE</b>	:	<b>NEUTRAL (N)</b>
<b>GREEN/YELLOW</b>	:	<b>EARTH (E)</b>

*As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, as follows*

- The BLUE wire is the NEUTRAL and must be connected to the terminal which is marked with the letter N or coloured BLACK.
- The BROWN wire is the LIVE and must be connected to the terminal that is marked with the letter L or coloured RED.
- The wire which is coloured GREEN / YELLOW must be connected to the terminal which is marked E or the earth symbol  $\perp$  or coloured GREEN or GREEN / YELLOW.
- Always ensure that the cord grip is positioned and securely fastened.
- **WARNING: THIS APPLIANCE MUST BE EARTHED.**
- *If a 13A (BS1363) fused plug is used it must be fitted with a BS1362 13A fuse. If in doubt consult a qualified electrician.*

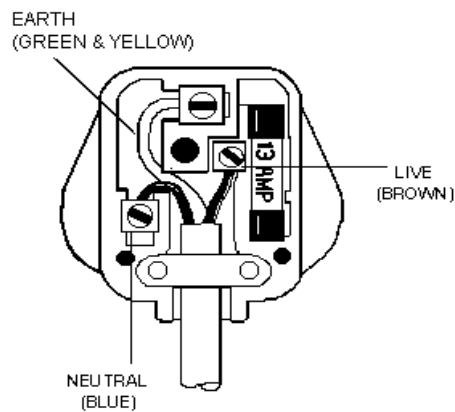

# bemodern

FIREPLACES & STOVES | BATHROOM FURNITURE

## Electric Fire Guarantee

**Be Modern Ltd.** (the 'Company') provides a **Twelve month** guarantee in respect of electric fire (the 'Product') ranges.

**1. The twelve month Guarantee applies to:**

- a. All products in the ranges manufactured by the 'Company' (but subject to the exceptions below): where
- b. The product has been purchased and installed within the UK and in respect of
- c. The initial installation: and in favour of
- d. The original purchaser

**2. Proof of Purchase must be retained by the Purchaser**

**3. The twelve month Guarantee does not apply to:**

- a. ***Damage or inferior workmanship practices whilst the 'Product' is being installed***
- b. ***Damage caused by mis-use of the 'Product' or where normal standards of care and use have not been complied with.***
- c. ***Damage through a malfunction or an inadequately installed electric fire.***
- d. ***Damage or defects due to mis-use, accident or unauthorised alterations.***

**4. During the 1 year** after the 'Product' has been supplied, the Guarantee covers the make good (whether by repair or replacement at the Company's option) of defects arising from defective manufacture of materials of 'Product' covered in Para 1 all at no cost to the purchaser on the proviso:

- a. The Product has been installed as Be Modern recommendations
- b. The Purchaser uninstalls the Product and makes it available for collection by Be Modern.

**This Guarantee does not affect your statutory rights**

**On requiring service the purchaser should contact the retailer who supplied your product who will assist and advise you as necessary.**

**Be Modern Ltd. Customer Services  
Tel (0191) 430 0901-Fax (0191) 430 9522**



# bemodern

FIREPLACES & STOVES | BATHROOM FURNITURE

## Environment



Meaning of crossed –out wheeled dustbin:

Electrical appliances should not be disposed as unsorted municipal waste. Separate collection facilities should be used in the disposal of electrical appliances. Contact your local government for the information about the available collection systems. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When old appliances are replaced by the new ones, it is a legal obligation for the retailer to take back the old appliance for disposals at least free of charge.



This fire complies with the Safety Standards EN 60335-1 and EN 60335-2-30 which covers the essential requirements of the Low Voltage Directive 2014/35/EU and the EMC standards EN 55014-1; EN 55014-2; EN 61000-3-2 and EN 61000-3-3 which covers the essential requirements of the European Electro Magnetic Compatibility 2014/30/EU, and the RED standards EN300220-2, EN301489-1, EN301489-3 and EN6247 which covers the essential requirements of the European Radio Equipment Directive 2014/53/EU.



This fire complies with the Safety Standards BS 60335-1 and BS 60335-2-30 which covers the essential requirements of the Electrical Equipment (Safety) Regulations 2016 and the EMC standards BS 55014-1; BS 55014-2; BS 61000-3-2 and BS 61000-3-3 which covers the essential requirements of the Electro Magnetic Compatibility Regulations 2016, and the RED standards BS 300220-2, BS 301489-1, BS 301489-3 and BS 6247 which covers the essential requirements of the Radio Equipment Regulations 2017.



RoHS stands for Restriction of Hazardous Substances, and impacts the entire electronics industry and many electrical products as well. The Restrictions of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012, originated in the European Union in 2002 and restricts the use of six hazardous materials found in electrical and electronic products. All applicable products in the EU and UK market since July 1, 2006 must pass RoHS compliance.